 






Suspension Linear Bar

LED Lighting

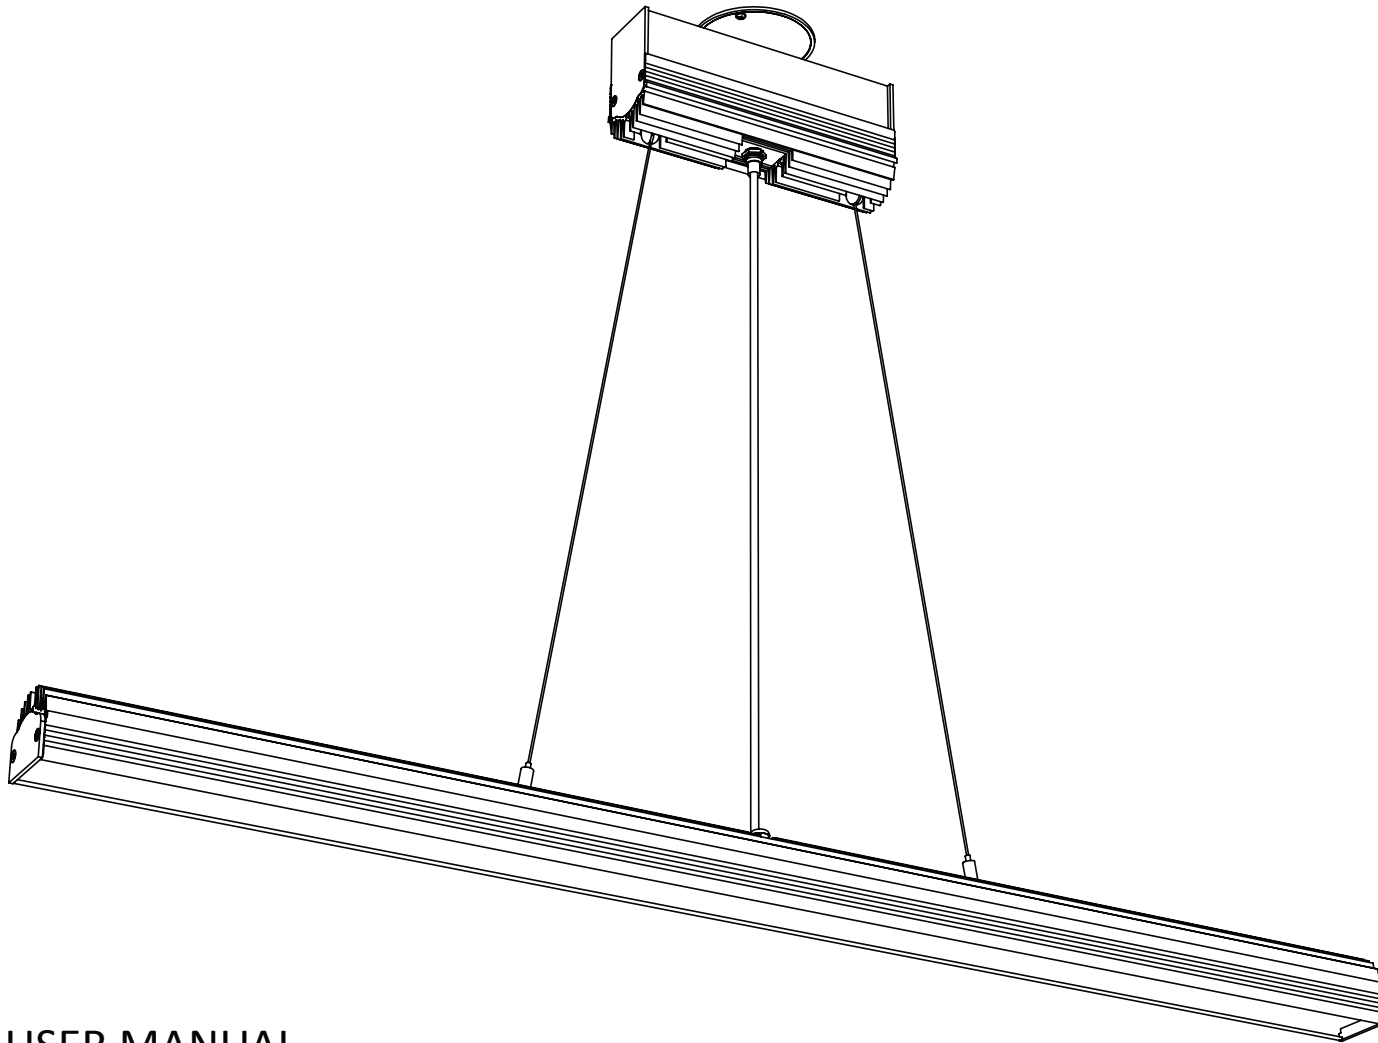

USER MANUAL

READ THOROUGHLY BEFORE INSTALLATION OR MAINTENANCE

WARNING	RISK OF ELECTRIC SHOCK	Turn power off before installing.	
	RISK OF BURN	Do not touch operating LED light fixture	
	RISK OF INJURY	Wear safety glasses and gloves during installation.	
	RISK OF PRODUCT DAMAGE	Never hot plug the light engine.	
	RISK OF PRODUCT DAMAGE	Surge current will damage the LED's	
CAUTION	RISK OF INJURY	Do not stare at light from LED light fixture, the bright light can damage the eyes.	

 
General Product Information :

- This Luminaire is suitable for indoor applications.
- SLB Linear Bar is designed to be mounted from canopy ceiling mount.
- Power supply is designed to be field replaceable.
- The light engine is designed to be field replaceable.


Maintenance

- Luminaire should be cleaned with only non-abrasive, PH neutral cleaning solution.
- Power supply unit can be purchased from the BL-Lights.com.


Content (Images are not to scale):

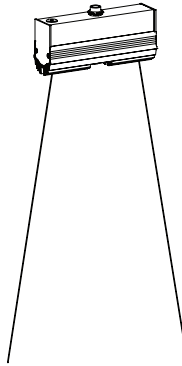

Power Supply Unit

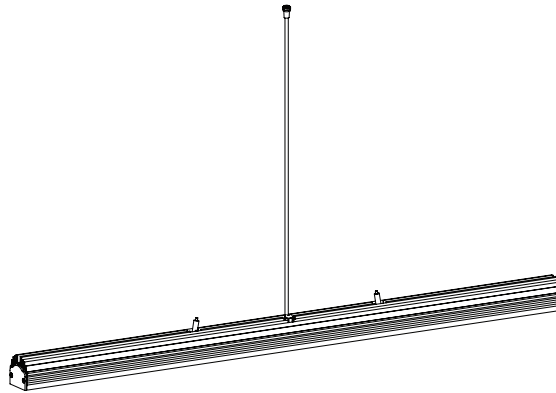 


Light Engine Unit

 


2 x

 Canopy Mounting Screw

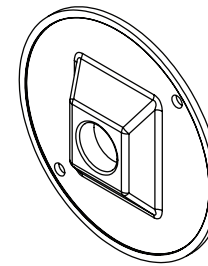


Junction Box Cover

 Tools Required (Images are not to scale):

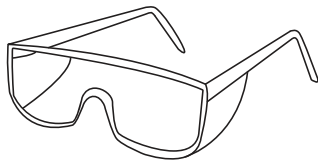


Safety Goggles

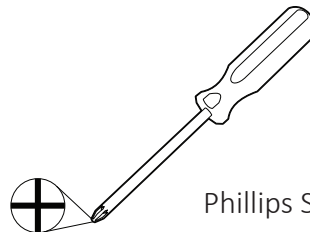 

Phillips Screwdriver





 Safety Gloves

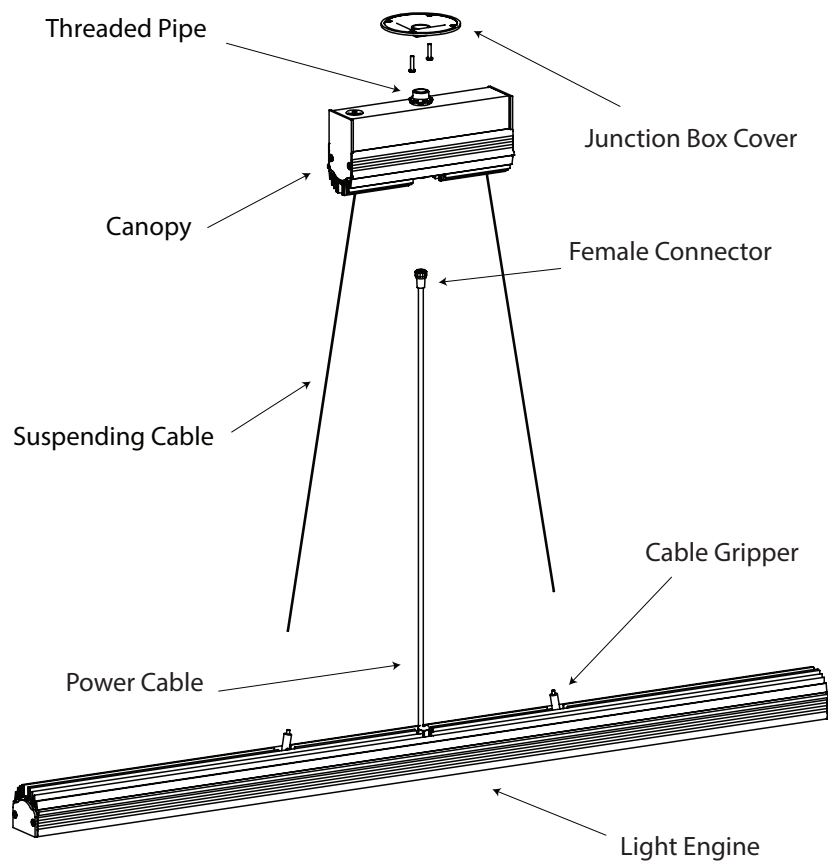


Operation

  - 1- Carefully remove the fixture from packaging.
- 2- Turn power off at the fuse box before installing.
- 3- Take power supply unit and attach it to Junction Box Cover. Twist junction box cover onto threaded pipe with provided hardware.
- 4- Connect wiring following the National Electric Code.
- 5- Align holes of Junction Box Cover with holes in Junction Box and attach with screws. Tighten.
- 6- Turn Canopy in desired direction and tighten locknuts.
- 7- Attach Light Engine to canopy by putting suspension cable into cable gripper. Adjust to desired length.
- 8- Align notch of each female connector with the notch of the male connector on the canopy. Push together and twist coupling ring until connectors do not pull apart.
- 9- Push boot of female connector to the end of the cable. It should touch the coupling ring.
- 10- Installation is complete. Turn on the power at the fuse box. Turn light switch on to activate the fixture.

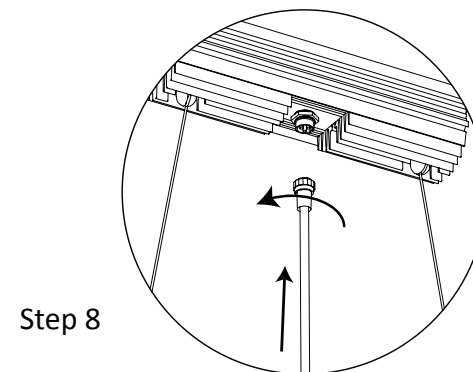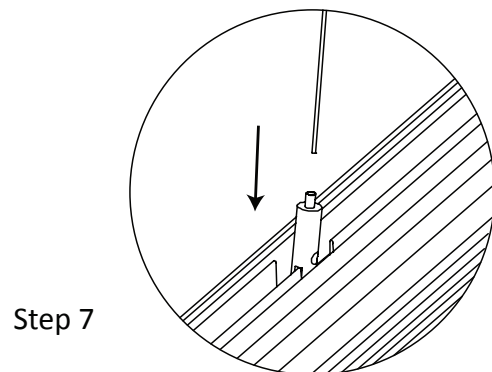

5 Year Limited Warranty

This product is warranted by Beyond Limitations Lighting for defects in material and workmanship for a period of three years from date of purchase. Contact Beyond Limitations Lighting for return directions. Product must be returned to the manufacturing facility for repair and/or replacement along with proof of purchase. BL-Lights will repair or replace the original light with replacement parts if needed and return the lamp back to you. In case the lamp is not repairable, a replacement lamp will be shipped to you; this may be a refurbished lamp or a new lamp. This limited warranty does not cover postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by/or resulting from accident, external destruction, alteration, modifications, abuse, misuse or misapplication of the product including fluctuating power levels.

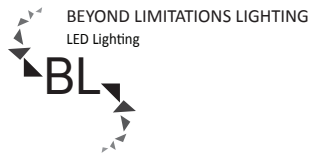

BEYOND LIMITATIONS LIGHTING
5414 NE 148th Ave. Portland, OR, USA 97230
+1-503-261-1266
info@bl-lights.com | www.bl-lights.com

Designed and Printed in USA.

Copyright 2014 BL Lighting. All rights reserved.